DIY **Mountain Shelf**




Items you will need to create a Mountain Shelf:

DAP Carpenter's Wood Glue
(1) 1" x 3" x 6' pine board - will make 2-3 shelves
Miter Saw
Brad nailer and 1" brad nails

INSTRUCTIONS

1. Cut (3) pieces of pine at 7" long each. Use your miter saw to cut a 30 degree angle at both ends. The angles should both be facing inward, on the edge of the board, as shown below.

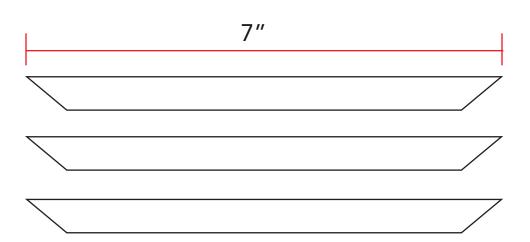

- 2. Apply a generous line of DAP Wood Glue to the edge of one board and press it to a second board edge, as shown. The pieces should fit together pinwheel style, as shown below.
- 3. Use your brad nailer and nail each end with three 1" nails.
- 4. Once the glue is dry, use painter's tape to create a graphic "mountain" look on the outside.

